

NORMANN

USER MANUAL

Mixer

AMX-513



DEAR CUSTOMER!

Attention! Check if the warranty card is present in the operating manual, if there are no mechanical damages.

Make sure the warranty card is stamped with the store stamp, date of sale, and the seller's signature.

Due to continuous improvement of the design, minor differences are possible

between the device you have purchased and the illustrations in the operating instructions.

Be careful!

Before using the appliance, please read this User Manual carefully. Always refer to this manual if you have any questions about its operation.

GENERAL VIEW



1 - Mixer body;
2 - On/off switch / speed control / nozzle removal lever;
3 - TURBO mode button;

4 - Button for disconnecting the mixer from the stand;
5 - Lift mechanism lock button;
6 - Stand (base) of the mixer;
7 - Removable rotating bowl.

DESCRIPTION

The electric mixer is designed for mixing liquid and bulk products, preparing sauces and desserts (whipped cream, puddings, cocktails, mayonnaise) with the whisk included in the device, as well as for kneading dough of different consistency with dough hooks.

The appliance is not intended for industrial and commercial use or for the processing of non-food products.

The manufacturer shall not be liable for damage resulting from incorrect or unintended use.

SAFETY RULES

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not allow children to use the appliance unsupervised.
- The appliance is intended for domestic use. Any commercial use is prohibited.
- Before using the device for the first time, make sure that the data indicated on the device corresponds to your mains voltage.
- Never use the appliance in the vicinity of a bathtub, shower or swimming pool.
- Never use accessories that are not supplied with this appliance or are not designed for this product.
- Do not place the appliance on the window sill.
- Make sure that the mains lead and mains plug cannot come into contact with water or moisture while the appliance is in use.
- Always place the appliance on a flat, dry surface.
- Do not pour water or other liquids inside the appliance. Do not immerse the appliance body in water or under running water.
- Always disconnect the unit from the mains power supply when left unattended and before assembling, disassembling or cleaning.
- This electric appliance is exclusively for home use and is designed to cook a normal amount of food.
- Do not use the device in an industrial environment or outdoors!
- Do not place the appliance on or in the immediate vicinity of an electric or gas stove. Do not place the appliance near an open fire, appliances or equipment that are sources of heat.
- Do not use a damaged appliance, an appliance with a damaged mains lead, or a damaged mains lead plug.
- If the power cord is damaged, it must be replaced by the manufacturer, the service department or similarly qualified personnel to avoid danger.
- Never carry out any repairs to the device yourself. Do not make any modifications to the appliance, as this may result in electric shock injury! Any tampering with the appliance during the warranty period may result in the risk of loss of the consumer's right to warranty repair.
- Do not place the mains cable of the appliance near hot surfaces or sharp objects. Do not place heavy objects on the power cord. Position the power cord so that it cannot be stepped on or caught by your foot. Make sure that the power cord does not hang over the edge of a table or touch a hot surface.
- Do not disconnect the appliance from the mains socket by pulling on the mains lead, as this may damage the mains lead/ mains socket. Disconnect the mains lead from the mains socket carefully by the plug of the mains lead.
- Do not use the appliance for other purposes for which it is not intended.
- Improper use of the device is a source of potential injury.
- Do not use accessories that are not included in the package.
- Do not leave the appliance switched on unattended.
- The device is intended for food processing only! Do not use it for any other purpose.
- Do not touch moving parts of the appliance with spoons or spatulas during use, as this may cause damage. Make sure that knives, spoons, forks and other kitchen utensils do not fall into the container while using the appliance.

Operating Instructions

- Do not cover the ventilation opening on the appliance housing, as this may cause the motor to overheat.
- To avoid injury, keep fingers, hair, and clothing away from moving parts of the mixer.
- Do not use the mixer to whip or mix thick and hard products such as frozen butter and dough. To avoid overloading and damage to the appliance parts, such products should be heated until softened.
- Do not leave the appliance unattended during operation.
- Unplug the appliance before changing accessories or nozzles.
- Make sure that all attachments are thoroughly cleaned at all times.
- DO NOT immerse the appliance in water or wash it in the dishwasher.

- This appliance is not designed for continuous operation, so to avoid overheating, after every 5 minutes of continuous operation, take a 10-minute break to allow the motor to cool down.
- Continuous operation time of the appliance with the dough hooks is 1-2 minutes, depending on the density of the mixture. Take a break of 5 minutes to avoid overheating.
- Never remove nozzles while the appliance is running, wait until the appliance has stopped completely
- The use of accessories and attachments not included in the scope of delivery will invalidate your right to warranty service
- Do not place the appliance and its accessories in the freezer, oven or microwave to avoid damage.

FIRST USE

After transporting or storing the device at a reduced temperature, keep the device at room temperature for at least two hours.

Remove the packing material from all parts of the unit. Clean all removable parts, accessories and parts of the appliance that will be in contact with food, according to the point CLEANING AND MAINTENANCE.

EQUIPMENT.

After the instrument has been unpacked, make sure that the instrument and all its assemblies are not damaged.

Attention! When installing the whisk and dough stirring attachments: the whisk or the attachment with stopper must be installed in the seat with the larger diameter, the whisk or the attachment without stopper in the seat with the smaller diameter. If there is no stopper (or if there is one) on both coupled nozzles, it does not matter where they are installed.

1. Unwind the power cord completely.
2. Place the removable bowl on the base and add the required ingredients. The mass to be whipped must not be higher than the working part of the attachments
3. Place the mixer on the stand. To do this, place the mixer in the center of the stand and push it forward until it hits the grooves until the

mixer locks into place.

4. Press the lifting mechanism lock button and lift the mixer with stand.
 5. Set the attachments according to the type of work. Use the whisk attachments to whip eggs and cream. Use the hooks for mixing dough. Press down on the attachment until it locks into place. Make sure that the nozzles are securely locked in place.
- Caution:** Only use the whisk and dough hook included with this appliance. Only attachments of the same type can be used, never use the whisk and dough hook at the same time.
6. Press the lift lock button and lower the mixer with the attachments in place into the bowl.
 7. Make sure that the on/off switch is in the "0" position. Insert the plug into the socket.

To avoid splashing food, turn the appliance on to a low speed and then gradually increase the speed with the switch.

8. Set the speed switch to "0" after finishing work and disconnect the appliance from the mains.

9. When disconnecting, hold the plug, do not disconnect the appliance by holding the mains lead.

10. Lift the mixer, disconnect the attachments by pressing the attachment release lever to the position marked "*", remove the mixer from the stand.

Attention! The mixer can only be inserted or removed after the drive has stopped and the plug has been removed from the socket.

Use the whisk attachments for preparing sauces, whipped cream, mashed potatoes, mayonnaise, creams, light non-yeast doughs. The dough kneading attachments are suitable for mixing thick doughs such as shortbread, yeast and potato doughs, as well as for mixing minced meat, pasta or bread dough. **Warning!** DO NOT cover the ventilation opening on the appliance during operation, as this may cause the motor to overheat.

Warning! In the event of a power failure, the appliance remains switched on.

Warning! Do not exceed the continuous operation time of the device. If the device overheats, let it cool down for 20-30 minutes.

Recommendations for selecting the operating speed

Speed	Description
1	Use for mixing loose and dry foods such as flour, and for butter or boiled potatoes.
2	Use to start whipping liquid ingredients, to make salad dressings.
3	Use to whip butter and sugar creams, to prepare sweets, desserts and similar products that are not subjected to the thermal treatment.
TURBO	Use this mode for sharp short-term acceleration. Do not operate in this mode for longer than 2 minutes.

CLEANING AND CARE

Before cleaning, be sure to turn off and unplug the appliance from the power outlet. Be sure to clean after each use.

Before using the appliance for the first time, rinse thoroughly the parts of the appliance that will be in contact with food.

Warning! Do NOT place the device housing under a water jet, immerse it in water or

wash it in a dishwasher or use any chemically aggressive, abrasive or other substances not recommended for use with food contact objects to clean the appliance.

Wipe the housing of the appliance with a damp cloth. Allow the entire appliance to dry.

TECHNICAL CHARACTERISTICS

Voltage: 220 - 240 V

Frequency: ~50 Hz

Rated power: 270 W

Maximum power: 350 W

Continuous operation time: max. 5 min

TRANSPORTATION AND STORAGE

It is recommended to transport the device packed in containers by any type of covered transport ensuring safety of the device, in accordance with the rules of cargo transportation, operating on this type of transport.

During transportation, the product must not be moved inside vehicles. The packaging and/or the product must not come into contact with water.

Before storing the device, be sure to clean it and allow it to dry completely. The device should be stored in a dry, closed room, out of reach of children, with air temperature from +10°C to +40°C, away from heating devices, excluding direct sunlight and moisture.

FAULT DIAGNOSIS

Fault	Possible cause	Remedy
The device does not turn on	The power cord plug is not inserted into the power outlet	Insert the plug into the power outlet
	There is no voltage in the mains socket	Connect the device to a serviceable outlet
There is an odor during operation	Some parts of the unit are coated with protective grease	The odor will disappear after a few times
The device has overheated	Continuous operation time exceeded	Reduce the operating time according to this manual

UTILIZATION



If a product has a symbol with a crossed-out wheeled bin, this means that the product complies with the European Directive 2012/19/EU.

Familiarize yourself with your local separate collection system for electrical and electronic goods. Follow local regulations.