

NORMANN

USER MANUAL

Coffee grinder
ACG-222



DEAR CUSTOMER!

Due to continuous design improvements, there may be slight differences between the device you purchased and the data and illustrations provided in the instruction manual.

Be careful!

Please read this Operating Instructions carefully before using the device. If you have questions about its operation, always refer to this manual.

SAFETY REGULATIONS

- Carefully read this user manual before using the device. Use the device only for its intended purpose. Improper use may result in damage to the device, harm to the user or their property.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to prevent them from playing with the appliance.
- Do not allow children to use the appliance without supervision.
- The device is intended for use in domestic conditions. Any commercial use is prohibited.
- Before using the device for the first time, make sure that the data indicated on the device corresponds to your electrical voltage. networks.
- Never use the appliance in the immediate vicinity of a bath, shower or swimming pool.
- Under no circumstances should you use accessories that are not supplied with this appliance or that are not intended for use with this product.
- Do not place the device on a windowsill.
- Make sure that the power cord and power plug cannot come into contact with water or moisture while using the appliance.
- Be sure to place the device on a flat, dry surface.
- Do not pour water or other liquids into the device. Do not immerse the device body in water or under running water.
- Always unplug the device from the electrical outlet when left unattended and before assembling, disassembling or cleaning.
- This appliance is intended for household use only and is designed to prepare normal quantities of food.
- Do not use the device in an industrial environment or outdoors!
- Do not use an aerosol can near the device.
- Do not place the appliance on an electric or gas stove, or directly in their vicinity. Do not place the device near open fire, devices or equipment that are sources of heat.
- Do not use a damaged appliance, an appliance with a damaged power cord, or a damaged power plug.
- If the power cord is damaged, it must be replaced by the manufacturer, service department or similarly qualified personnel to avoid danger.
- Under no circumstances should you repair the device yourself. Do not make any modifications to the device as this may result in injury from electrical shock. electric shock! Any tampering with the device during the warranty period may result in the risk of the consumer losing the right to warranty repairs.
- Do not place the power cord of the device near hot surfaces or near sharp objects. Do not place heavy objects on the power cord. Position the wire so that it is impossible to step on it or catch your foot. Make sure that the power cord does not hang over the edge of the table or touch a hot surface.
- Repair of the device and replacement of a damaged power cord can only be carried out by qualified specialists - service center employees. Unqualified repairs pose a direct danger to the user.
- Do not disconnect the appliance from the power socket by pulling the power cord, as this may damage the power cord/wall socket. The cord from the socket should be disconnected carefully using the power plug.
- Do not use the device for other purposes for which it is not intended.
- Improper use of the device can result in potential injury.
- Do not use accessories not included in the scope of delivery.
- Do not leave the device turned on unattended.
- The device is intended for processing food products only! Do not use it for any other purpose.


- Be careful! The knives are very sharp! Risk of injury!
- Do not fill the coffee cup beyond the maximum level.
- Do not allow moisture to get inside the bowl.
- Do not open the lid until the knife has completely stopped.
- Be sure to unplug the device before removing ingredients or cleaning.
- Attention! The cover of this device can be installed on the body in only one position; if the cover is

installed incorrectly, the coffee grinder will be blocked from turning on.

- Do not use the coffee grinder to grind foods with a high oil content, such as peanuts, chocolate, cheese, or hard grains (such as rice).
- The coffee grinder is not intended for preparing pastes from any fruits and vegetables.
- Do not use the coffee grinder to grind sugar, salt, green coffee beans, etc.

GENERAL VIEW

1. Power button
2. Lid
3. Switch
4. Maximum Load Label
5. Knife
6. Frame
7. Power cable

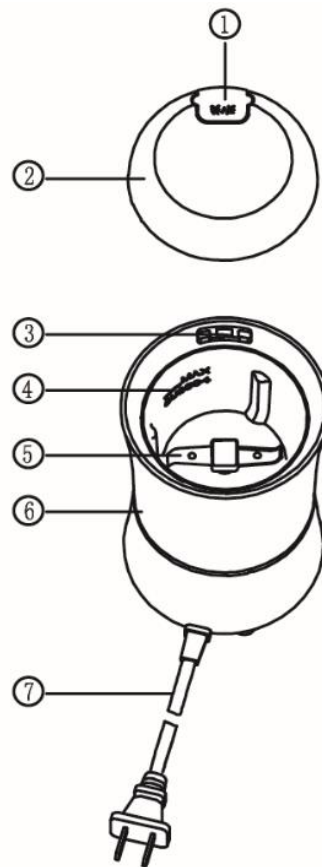

DESCRIPTION

An electric coffee grinder is designed for grinding coffee beans and spices.

The device is equipped with a safe inclusion system: the lid of this device can be installed on the body in

only one position; if the lid is installed incorrectly or is not tightly closed, the coffee grinder will be blocked from turning on. The device operates as long as the power button is pressed and held.

PREPARING FOR USE

After transporting or storing the device at low temperatures, it is necessary to keep the device at room temperature for at least two hours. Remove packaging material from all parts of the coffee grinder.

Clean all removable parts and accessories according to **CLEANING AND CARE**.

Place the device on a stable, horizontal surface.

EXPLOITATION

Attention! Before loading coffee or spices, make sure the appliance is unplugged.

Remove the lid from the appliance and add coffee or spices into the bowl, not exceeding the maximum level.

Install the cover so that the power button is above the switch.

Plug in the device .

Press and hold the power button . The coffee grinder will start working.

To stop the grinding process, release the button.

Unplug the device and remove the contents.

Notes. Never leave ground coffee or spices in the grinder bowl, as... The body heated during operation affects the taste properties of the crushed products.

Attention! Work cyclically: do not load the device for more than 30 seconds, then pause for at least 1 minute. If the device overheats, allow it to cool for 10 minutes.

Depending on your grind preference, you can grind your coffee in multiple cycles.

Don't try to get the grind as fine as possible: different methods of brewing coffee require different degrees of grinding of the coffee beans.

CLEANING

Before cleaning, be sure to turn off the device and unplug it from the electrical outlet. Be sure to clean after each use.

Attention! DO NOT place the device body under running water or immerse it in water, or use any chemically aggressive, abrasive or other substances not recommended for use with items in contact with food to clean the device.

Be careful when cleaning the knife. Remove heavy dirt from inside the bowl with a damp cloth. The

protective cover can be washed with warm water and a mild detergent. Wipe the device body with a damp cloth.

Let the entire device dry.

To clean the bowl, use the brush included in the kit.

It is not recommended to wash the protective cover in the dishwasher as this may cause the plastic to lose its transparency.

TECHNICAL SPECIFICATIONS

Power supply: 220-240V ~ 50Hz

Rated power: 200W

Bowl capacity: 50 g

TRANSPORTATION AND STORAGE

It is recommended to transport the device packaged in a covered transport of any type that ensures the safety of the device, in accordance with the cargo transportation rules in force for this type of transport. During transportation, the possibility of moving the product inside vehicles must be excluded. Water must not come into contact with the packaging and/or product.

Before storing the device, be sure to clean it and allow it to dry completely. The device should be stored in a dry, closed room, out of the reach of children, at an air temperature of +10°C to +40°C, away from heating devices, away from direct sunlight and moisture.

MALFUNCTION DIAGNOSIS

Malfunction	Possible reason	Remedy
The device does not turn on	The power cord is not plugged into the electrical outlet.	Insert the plug into the electrical outlet
	There is no voltage in the power outlet	Connect the device to a working outlet
There was an odor during operation	Some parts of the device are coated with protective lubricant	After a few uses the smell will disappear
The device has overheated	Continuous operation time exceeded	Reduce operating time according to this manual
Grinding coffee too large (uneven)	Insufficient grinding time	Increase continuous time grinding (should not exceed 30 seconds)
	There is too much coffee in the cup	Place coffee beans in bowl in smaller portions

UTILIZATION



If a product has a symbol with a crossed out wheelie bin, this means that the product complies with European Directive 2012/19/EU.

Check your local separate collection system for electrical and electronic goods. Follow local regulations.

Dispose of old devices separately from household waste. Correct disposal of your product will help prevent potential negative consequences for the environment and human health.