

NORMANN

USER MANUAL

Mixer

AMX-474




DEAR CUSTOMER!

Attention! Check for mechanical damage. Due to continuous improvement, there may be slight differences between the device you have purchased and the illustrations in the operating instructions.

Be careful!
Before using the appliance, please read this User Manual carefully. Always refer to this manual if you have any questions about its operation.

OVERVIEW

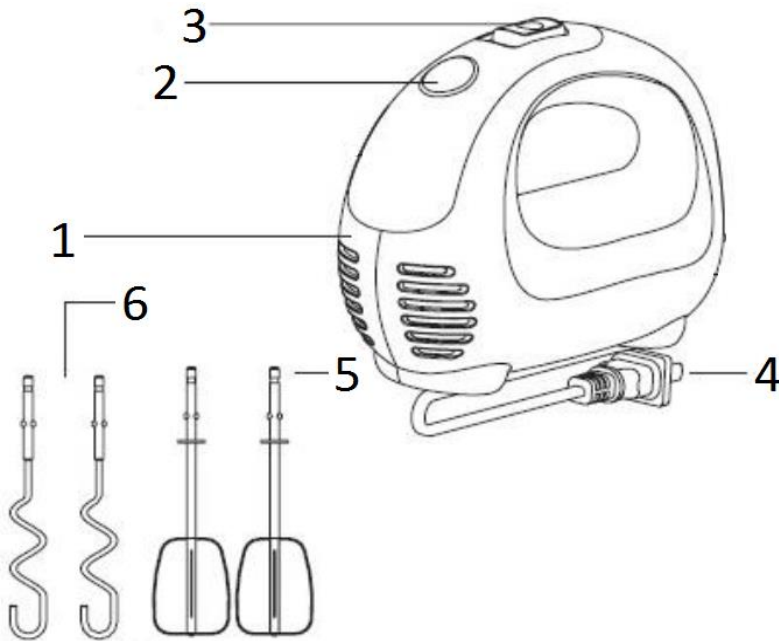

- 1 - Case;
- 2 - Nozzle eject button;
- 3 - On/Off switch / Nozzle speed regulator;
- 4 - Power cord;
- 5 - Corollas;
- 6 - Hooks for kneading the dough.

DESCRIPTION

Electric hand mixer is designed for mixing liquid, preparing sauces and desserts (whipped cream, puddings, cocktails, mayonnaise) with the whisk included in the device, as well as for kneading dough of different consistency with dough hooks.

The appliance is not intended for industrial or commercial use, or for the processing of non-food products.

The manufacturer shall not be liable for damage resulting from incorrect or unintended use.

SAFETY RULES

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of

the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Do not allow children to use the appliance unsupervised.

- The appliance is intended for domestic use. Any commercial use is prohibited.
- Before using the device for the first time, make sure that the data indicated on the device corresponds to your mains voltage.
- Never use the appliance in the vicinity of a bathtub, shower or swimming pool.
- Never use accessories that are not supplied with this appliance or are not designed for this product.
- Do not place the appliance on the window sill.
- Make sure that the mains lead and mains plug cannot come into contact with water or moisture while the appliance is in use.
- Always place the appliance on a flat, dry surface.
- Do not pour water or other liquids inside the appliance. Do not immerse the appliance body in water or under running water.
- Always disconnect the unit from the mains power supply when left unattended and before assembling, disassembling or cleaning.
- This electric appliance is exclusively for home use and is designed to cook a normal amount of food.
- Do not use the device in an industrial environment or outdoors!
- Do not place the appliance on or in the immediate vicinity of an electric or gas stove. Do not place the appliance near open flames, appliances or equipment that are sources of heat.
- Do not use a damaged appliance, an appliance with a damaged mains lead, or a damaged mains lead plug.
- If the power cord is damaged, it must be replaced by the manufacturer, the service department or similarly qualified personnel to avoid danger.
- Never carry out repairs to the device yourself. Do not make any modifications to the appliance, as this may result in electric shock injury! Any tampering with the appliance during the warranty period may result in the risk of loss of the consumer's right to warranty repair.
- Do not place the mains cable of the appliance near hot surfaces or sharp objects. Do not place heavy objects on the power cord. Position the power cord so that it cannot be stepped on or caught by your foot. Make sure that the power cord does not hang over the edge of a table or touch a hot surface.
- Do not disconnect the appliance from the mains socket by pulling on the mains lead, as this may damage the mains lead/ mains socket. Disconnect the mains lead from the mains socket carefully by the plug of the mains lead.
- Do not use the appliance for other purposes for which it is not intended.
- Improper use of the device is a source of potential injury.
- Do not use accessories that are not included in the package.
- Do not leave the appliance switched on unattended.
- The device is intended for food processing only! Do not use it for any other purpose.
- Do not touch moving parts of the appliance with spoons or spatulas during use, as this may cause damage. Make sure that knives, spoons, forks and other kitchen utensils do not fall into the container while using the appliance.
- Do not cover the ventilation hole on the appliance housing, as this may cause the motor to overheat.
- To avoid injury, keep fingers, hair, and clothing away from moving parts of the mixer.
- Do not use the mixer to whip or mix thick and hard products such as frozen butter and dough. To avoid overloading and damage to the appliance parts, such products should be heated until softened.
- Do not leave the appliance unattended during operation.
- Unplug the appliance before changing accessories or nozzles.
- Make sure that all attachments are thoroughly cleaned at all times.
- DO NOT immerse the appliance in water or wash it in the dishwasher.
- This appliance is not designed for continuous operation, so to avoid overheating, after every 5 minutes of continuous operation, take a break for 10 minutes to allow the motor to cool down.

- Continuous operation time of the appliance with the dough hooks is 1-2 minutes, depending on the density of the mixture. Take a break of 5 minutes to avoid overheating.
- Never remove the nozzles while the appliance is running, wait until the appliance has stopped completely.

- The use of accessories and nozzles not included in the scope of delivery will invalidate your warranty.
- Do not place the appliance and its accessories in the freezer, oven or microwave to avoid damage.

FIRST USE

After transporting or storing the device at a reduced temperature, keep the device at room temperature for at least two hours. Remove the packing material from all parts of the device.

Clean all removable parts, accessories and parts of the appliance that will be in contact with food

according to the point CLEANING AND MAINTENANCE.

EQUIPMENT

After the instrument has been unpacked, make sure that the instrument and all its assemblies are not damaged.

Attention! When installing the whisk and dough stirring attachments: the whisk or the attachment with the stopper is placed in the seat with the larger diameter, the whisk or the attachment without the stopper in the seat with the smaller diameter. If there is no stopper (or if there is one) on both coupled nozzles, it does not matter where they are installed.

1. Unwind the power cord completely.
2. Set the attachments according to the type of work. Use the whisk attachments to whip eggs and cream. Use the hooks for mixing dough. Press down on the attachment until it locks into place. Make sure that the nozzles are securely locked in place.

Caution: Only use the whisk and dough hook included with this appliance. Only attachments of the same type can be used, never use the whisk and dough hook at the same time.

3. Make sure that the on/off switch is in the "0" position. Insert the plug into the socket.
4. Load the food into a suitable container. The mass to be whipped must not be higher than the working part of the nozzles.

5. Immerse the nozzles in the container and turn on the appliance. To avoid splashing food, turn the appliance on at low speed and then gradually increase the speed with the switch.

6. Set the speed switch to "0" after finishing work and disconnect the appliance from the mains. When disconnecting, hold the plug, do not disconnect the appliance by holding the mains lead.

7. Disconnect the nozzles by pressing the nozzle eject button

Use the whisk attachments for preparing sauces, whipped cream, mashed potatoes, mayonnaise, creams, light non-yeast doughs. The dough kneading attachments are suitable for mixing thick doughs such as shortbread, yeast and potato doughs, as well as for mixing minced meat, pasta or bread dough.

Warning! DO NOT cover the ventilation opening on the appliance during operation, as this may cause the motor to overheat.

Warning! In the event of a power failure, the appliance remains switched on.

Warning! Do not exceed the continuous operation time of the device. If the device overheats, let it cool down for 20-30 minutes.

CLEANING AND CARE

Before cleaning, be sure to turn off and unplug the appliance from the power outlet. Be sure to clean after each use.

Before using the appliance for the first time, rinse thoroughly the parts of the appliance that will be in contact with food.

Warning! DO NOT place the appliance housing under running water, immerse it in water or wash

it in a dishwasher, or use any chemically aggressive, abrasive or other substances not recommended for use with food contact objects to clean the appliance.

Wipe the appliance housing with a damp cloth. Allow the entire appliance to dry.

TECHNICAL PARAMETERS

Voltage: 220 - 240 V

Frequency: ~50 Hz

Rated power: 150 W

Maximum power: 200 W

Continuous operation time: max. 5 min

TRANSPORTATION AND STORAGE

It is recommended to transport the device packed in containers by any type of covered transport ensuring safety of the device in accordance with the cargo transportation rules applicable to this type of transport.

During transportation, the product must not be moved inside vehicles. The packaging and/or the product must not come into contact with water.

Before storing the device, be sure to clean it and allow it to dry completely. Store the device in a dry closed room, out of the reach of children, with air temperature from +10°C to +40°C, away from heating devices, excluding direct sunlight and moisture.

+40°C, away from heating devices, out of direct sunlight and moisture.

FAULT DIAGNOSIS

Fault	Possible cause	Remedy
The device does not turn on	The power cord plug is not inserted into the power outlet	Insert the plug into the power outlet
	There is no voltage in the mains socket	Connect the device to a serviceable outlet
There is an odor during operation	Some parts of the unit are coated with protective grease	The odor will disappear after a few times
The device has overheated	Continuous operation time exceeded	Reduce the operating time according to this manual

UTILIZATION



If a product has a symbol with a crossed out wheeled bin, this means that the product complies with the European Directive 2012/19/EU.

Familiarize yourself with your local separate collection system for electrical and electronic goods. Follow the local regulations.

Dispose of old devices separately from household waste. Proper disposal of your product will prevent possible negative consequences for the environment and human health